


KITCHEN WALL CABINET


Ready to Assemble — Assembly Instruction
-everything you need is included in this package-

PACKAGE LIST

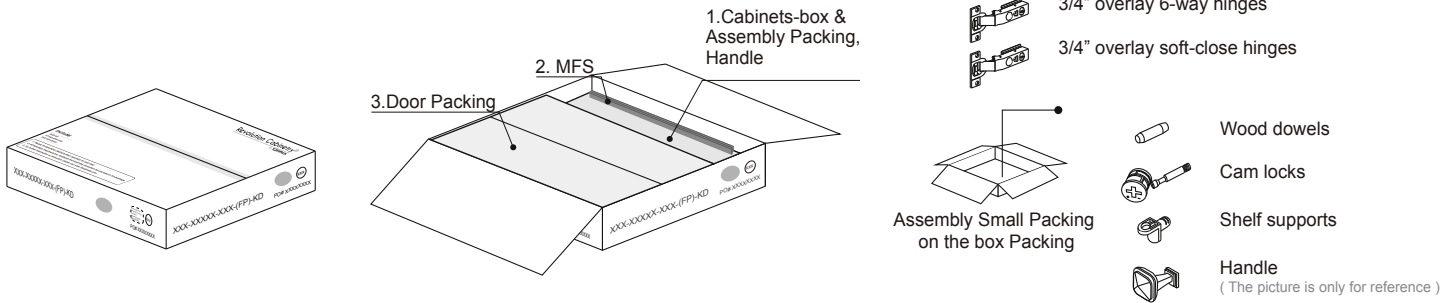


ASSEMBLY STEPS


Step 1: Install the soft-close hinge plate on upper holes of the side panels, install the 6-way hinge plate on lower holes of the side panel.

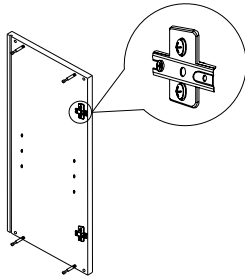

Step 2: connect the top panel, bottom panel, back braces and side panel using cam locks and wood dowels.

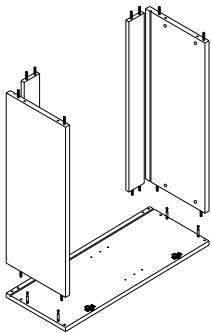


Step 3: slide the back panel into its slot, then install the side panel using cam locks and wood dowels.

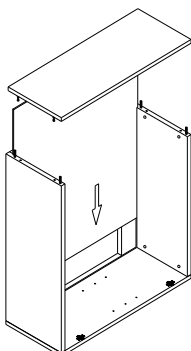


Step 4: Install the 3/4" overlay soft-close hinges in the upper holes of the doors; install the 3/4" overlay 6-way hinges in the lower holes of the doors.

3/4" overlay soft-close hinges

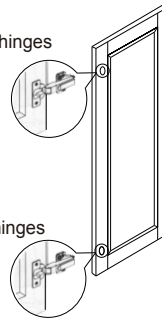


3/4" overlay 6-way hinges

Step 5: Connect the doors to the box, hinges on the door panels snap into the hinges on the side panels.

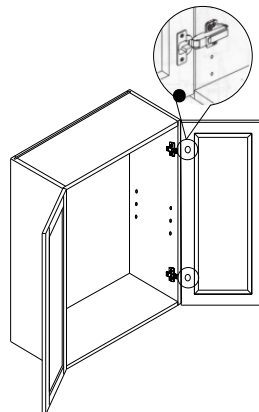

Step 6: Install the shelf supports at the desired height then place shelves on top of the supports.

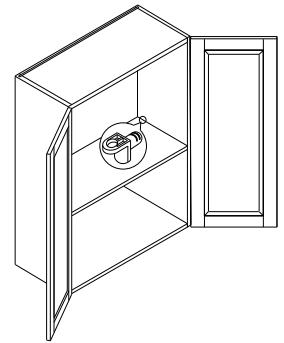

Step 8: Adjust the hinges to ensure that the clearance for all doors is the same. Finally, check the firmness and stability of the cabinet tightening the cam locks as necessary.

