Revolution Cabinetry®
By Team efforts

VANITY CABINET (VDB1221D-3~VDB1821-3)

Ready to Assemble — Assembly Instruction

-everything you need is included in this package-

PACKAGE LIST

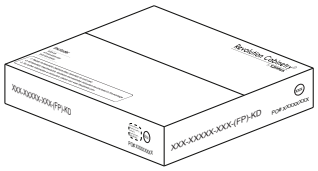

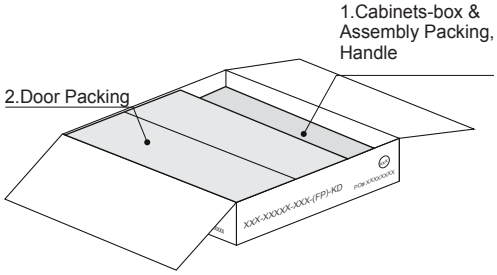



3/4" overlay 6-way hinges

3/4" overlay soft-close hinges

Nickel round head screws

Wood dowels

Cam locks



Assembly Small Packing
on the box Packing

Handle
(The picture is only for reference)



Undermount soft-close slide
(Only the cabinet containing
drawers has this accessory.)

ASSEMBLY STEPS

Part	Descriptions	Qty
B,C,D	Drawer Parts	3
E	Slide With Screws	3
F	Drawer Front	3
H	Side Panel	2
I	Bottom Panel	1
J	Rail	1
K	Rail	1
L	Wood Dowel	8
M	Back Panel	1
N	Toe Kick	1
O	Cam Lock	12

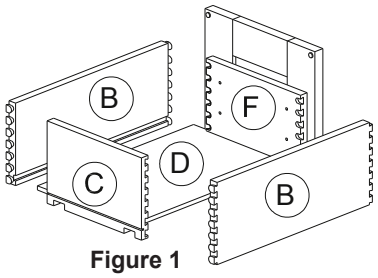

Figure 1

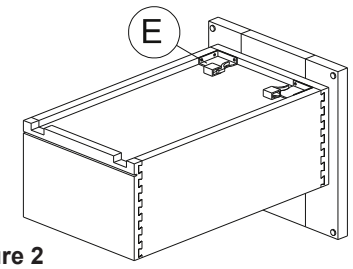

Figure 2

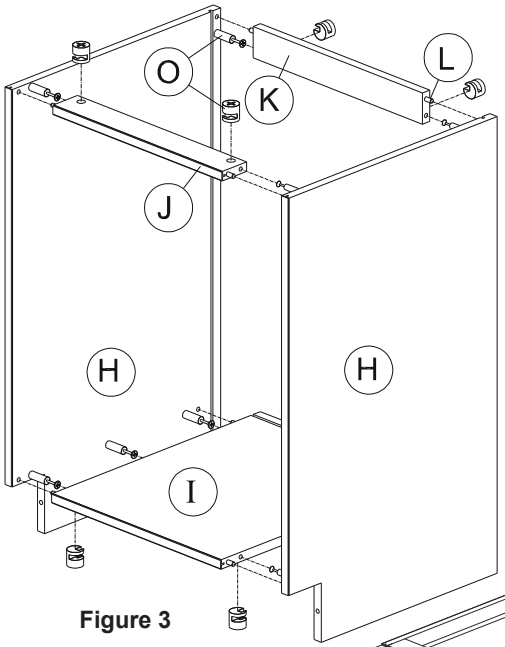

Figure 3

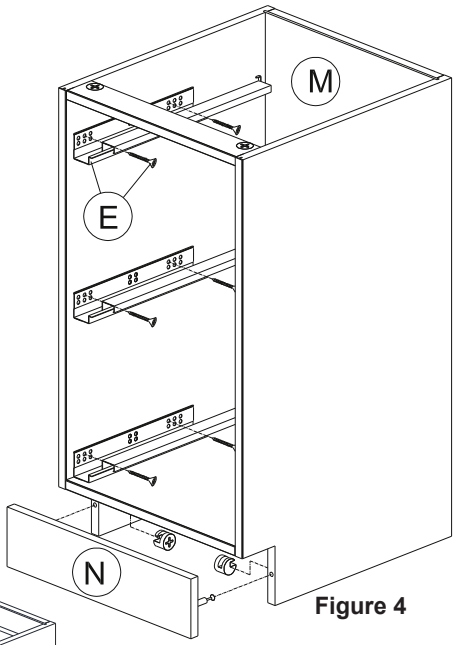

Figure 4

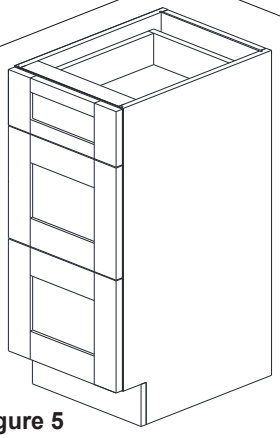

Figure 5